



# PN25 Butterfly Valve

## Fig. 4925 Butterfly Valve Fig. 4923 Butterfly Double-Regulating Valve

### CE MARKING AND THE PRESSURE EQUIPMENT DIRECTIVE 2014/68/EU

The Pressure Equipment Directive applies to all valves with a maximum allowable pressure greater than 0.5 bar. Valves with a maximum allowable pressure not exceeding 0.5 bar are outside the scope of the Directive. Valves are categorised in accordance with the maximum working pressure, size and ascending level of hazard, which is dependent on the fluid being transported. Fluids are classified as Group 1, dangerous fluids or Group 2, all other fluids including steam. Categories are SEP (sound engineering practice) and for ascending levels of hazard, I, II, III or IV. All valves designated as SEP do not bear the CE mark nor require a Declaration of Conformity. Categories I, II, III or IV carry the CE mark and require a Declaration of Conformity (Note- all valves up to and including 25mm (1") having a maximum allowable pressure greater than 0.5 bar are designated SEP regardless of fluid group.)



### PRODUCT LIFE CYCLE

The life of the valve is dependent on its application, frequency of use and freedom from misuse. Compatibility with the system into which it is installed must be considered. Valves must be installed into a well-designed system and it is recommended that the system be inspected in accordance with the appropriate national and regional legislation. The properties of the fluid being transported such as pressure, temperature and the nature of the fluid must be taken into account to minimise or avoid premature failure or non-operability. A well-designed system will take into consideration all the factors considered in the valve design, but additionally electrolytic interaction between dissimilar metals in the valve and the system must be examined. Before commissioning a system, it should be flushed to eliminate debris and chemically cleaned as appropriate to eliminate contamination, all of which will prolong the life of the valve.

## LIMITS OF USE

These valves have been categorised in accordance with the Pressure Equipment Directive 2014/68/EU.

**On no account must these valves be used on any group 1 liquids, group 1 gases, group 2 gases or unstable fluids.**

Note - Valves that are classified as SEP (Sound Engineering Practice) are not CE marked and therefore do not require a declaration of conformity.

Fig No / Body Style	Liner Material / Temperature Limits	Pressure Rating	Product Application				PED Category by Valve Size		
			Group 1 Gas	Group 2 Gas	Group 1 Liquid	Group 2 Liquid	SEP	I	II
4923 Fully Lugged Butterfly DRV Lever 4923 Fully Lugged Butterfly Lever	EPDM -10 to 120°C	PN25	-	-	-	✓	50-150	-	-
4923G Fully Lugged Butterfly DRV Lever 4925B Fully Lugged Butterfly Bareshaft 4925G Fully Lugged Butterfly Gearbox	EPDM -10 to 120°C	PN25	-	-	-	✓	50-200	250-600	-

\* Category I requires the CE mark

## PRESSURE/TEMPERATURE RATING

These valves must be installed in a piping system whose normal pressure and temperature do not exceed the above ratings.

If system testing will subject the valve to pressures in excess of the working pressure rating, this should be within the test pressure for the body with the valve open, i.e. 1.5 x maximum seat pressure rating.

The maximum allowable pressure in valves as specified in the standards is for non-shock conditions. Water hammer and impact, for example, should be avoided.

If the limits of use specified in these instructions are exceeded or if the valve is used on applications for which it was not designed, a potential hazard could result.

## END OF LINE SERVICE

It is not recommended to use these valves for end of line service.

If valves are installed at end of line, a blanking flange must be fitted on downstream side of valve.

## LAYOUT AND SITING

Butterfly valves 4923 and 4923G are fitted with a double regulating device, and may be used in conjunction with a Fig M3000 metering station.

When used with the Fig M3000 a spool piece must be fitted between the metering station and the valve with a minimum length of 1.5 x the nominal pipe diameter.

Flow must pass through the metering station first and secondly through the valve.

These valves can be fitted in either horizontal or vertical pipework. When installed in a horizontal pipeline, the valve stem should be preferably horizontal. This enables the butterfly valve to be self-cleaning and also enables the weight of the disc to be equally borne by the bearings.

It should be considered at the design stage where valves will be located to give access for operation, adjustment, maintenance and repair.

Valves must be provided with adequate support. Adjoining pipework must be supported to avoid the imposition of pipeline strains on the valve body, which would impair its performance.

Heavy valves may need independent support or anchorage.

## INSTALLATION

The Fig 4925 and Fig 4923 are fully lugged valves and should be located between flanges utilising the flange bolt holes. The flange bolts or studs should be tightened diagonally until the body touches the flange face with metal to metal contact.

Prior to installation, a check of the identification plate and body marking must be made to ensure that the correct valve is being installed.

Valves are precision manufactured items and as such, should not be subjected to misuse such as careless handling, allowing dirt to enter the valve through the end ports, lack of cleaning both valve and system before operation and excessive force during bolting and handwheel/lever operation.

All special packaging material must be removed.

Valves must be provided with adequate support. Adjoining pipework must be supported to avoid the imposition of pipeline strains on the valve body, which would impair its performance.

When large valves are provided with lifting lugs or eye nuts, these should be used to lift the valve.

Immediately prior to valve installation, the pipework to which the valve is to be fastened should be checked for cleanliness and freedom from debris.

Valve packaging should only be permanently removed immediately before installation. The valve interior should be inspected through the end ports to determine whether it is clean and free from foreign matter.

The mating flange (both valve and pipework flanges) should be checked for correct gasket contact face, surface finish and condition.

If a condition is found which might cause leakage, no attempt to assemble should be made until the condition has been corrected.

This butterfly valve has integral rubber sealing faces and gaskets must not be used.

In order to maintain an effective sealing face with the pipe flange, integral, weld-neck, slip-on or loose plate flanges should be used.

The pipe flange should cover the rubber body liner forming the gasket face of the body. If pipe other than BS EN10255 Medium Grade, BS EN 10220 or Schedule 40 is used the gasket face may only partially covered please refer to the Hattersley Technical Dept.

Care should be taken to provide correct alignment of the flanges being assembled. Suitable lubricant on bolt threads should be used.

In assembly, bolts are tightened sequentially to make the initial contact of flanges and gaskets flat and parallel followed by gradual and uniform tightening in an opposite bolting sequence to avoid bending one flange relative to the other, particularly on flanges with raised faces.

Parallel alignment of flanges is especially important in the case of the assembly of a valve into an existing system.

Flanged joints depend on compressive deformation of the integral rubber sealing faces between the flange surfaces until metal to metal contact is achieved.

The bolting must be checked for correct size, length, material and that all connection flange bolt holes are utilised.

## OPERATING - GEAR OPERATED

An enclosed worm gear reduction operator (gearbox) is mounted on the valve body with the gear quadrant intimately connected with the valve shaft. The full open and full closed position travel stops are set at the factory and require no further adjustment.

**Note:** if the gearbox is fitted with a padlock and locking ring, the padlock will require removal prior to operation.

Valve closure is by clockwise rotation of the handwheel until the travel stop restriction is felt. No excessive force is required to effect tight shut off and under no circumstances should a wrench or wheelkey be used.

Counter clockwise rotation of the handwheel will open the valve until the full open travel stop or to the intermediate regulated travel stop (memory stop) if fitted on the double regulating version.

A non-adjustable pointer indicates the actual valve disc position against a fixed scale.

The memory stop (double regulating versions only) device is fitted at the factory so that the valve may be operated over its full travel prior to commissioning without the need for adjustment.

## SETTING THE GEARBOX MEMORY STOP (REFER TO FIG 1)

Slacken the setscrew 'A' sufficient to allow the position limiting plate to rotate. The position limiting plate rotates freely on the central screw, which does not require any adjustment.

Using the usual commissioning procedures, rotate the handwheel to move the disc to the required position.

Ensure that the position limiting plate is in contact with the raised stop on the indicator pointer, if not rotate the plate until it touches.

Tighten the setscrew 'A' to limit the maximum position of valve opening.

Record the regulation position.

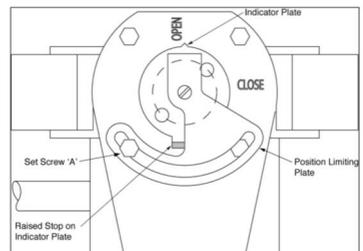


Fig 1

# OPERATING - LEVER OPERATED

## Hydrodynamic Torque

Care must be taken when operating the valve by the lever as high rates of flow induce a hydrodynamic torque on the disc which may cause it to move position rapidly, either more open or slamming shut, depending on its initial position. The sudden movement on the lever can cause injury and if closing, water hammer on liquid service may result in system damage.

Valve closing is by clockwise motion of the lever. Squeeze the trigger to disengage the lever from the fully open (or regulated) notch position, the lever can be rotated to the closed position notch, release the trigger to secure.

No excessive force is required to effect tight shut off and under no circumstance should additional wrenches be used.

Squeeze the trigger to disengage, rotate the lever counter clockwise will open the valve from the closed notch to the fully open (or regulated) notch, release the trigger to secure.

## Memory Device

The regulating device comprises two steel plates, a lower plate fixed to the valve and an upper rotation plate. An indicator mark on the lower plate shows the valve position against the moving scale on the top plate.

## SETTING THE LEVER MEMORY STOP (REFER TO FIG 2)

With set-screw 'A' slackened (care should be taken to prevent the valve slamming shut due to water velocity) the lever can be moved to any infinitely variable position between closed and fully open.

Ensure that the lever is located in notch 'C' in upper plate 'B' which rotates with the lever. When the required regulated position is achieved re-tighten set screw 'A', which will fix this set position.

To close the valve, disengage the trigger from notch 'C' and rotate to notch 'D' in the lower plate. Reversing this procedure will return the lever to the previously regulated open position.

The valve can be locked in both open and closed positions by tightening the locking screw in the lever trigger. This prevents the trigger from being squeezed and disengaging from the notch.

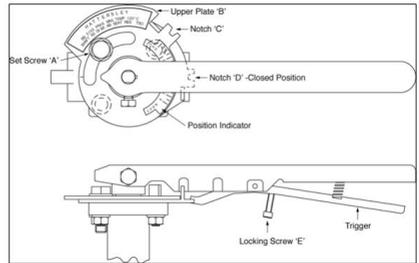


Fig 2

## MAINTENANCE

These butterfly valves are maintenance free.

The valve should be at zero pressure and ambient temperature prior to any maintenance inspection.

Maintenance Engineers & Operators are reminded to use correct fitting tools and equipment.

A full risk assessment and methodology statement must be compiled prior to any maintenance.

The risk assessment must take into account the possibility of the limits of use being exceeded whereby a potential hazard could result.

A maintenance programme should therefore include checks on the development of unforeseen conditions, which could lead to failure.



EPSILON TERRACE, WEST ROAD  
IPSWICH, IP3 9FJ  
HOME SALES: +44 (0)1473 277410  
EXPORT SALES: +44 (0)1473 277450

TECHNICAL HELPLINE: +44 (0)1473 277400  
FAX: +44 (0)1473 277411

EMAIL: [uksales@hattersley.com](mailto:uksales@hattersley.com)  
EMAIL: [exportsales@hattersley.com](mailto:exportsales@hattersley.com)

[www.hattersley.com](http://www.hattersley.com)



FM 00311

- Designed and manufactured under quality management systems in accordance with ISO 9001-2015

Every effort has been made to ensure that the information contained in this publication is accurate at the time of publishing. Hattersley assumes no responsibility or liability for typographical errors or omissions or for any misinterpretation of the information within the publication and reserves the right to change without notice.

H\_BV\_0818  
IOM\_050M04925D799R1\_V3